

M216KASPC

For Serial Nos. 260,000 & Higher

PARTS MANUAL



METRO®21

BLADE BRAKE CLUTCH MODEL

CONGRATULATIONS on the purchase of your new Exmark mower. This product has been carefully designed and manufactured to give you a maximum amount of dependability and years of trouble–free operation.

If additional information is needed, or should you require trained mechanic service, contact your authorized Exmark equipment dealer or distributor.

If you need to order replacement parts from your dealer, always give the model number and serial number of your mower as well as the part number, description and quantity of the part needed.

The Serial No. plate is located on the top of the mower deck on the right hand rear corner.

For ease of ordering and reference, we suggest that you record the information requested in the following identification table.

Model No.	
Serial No.	
Engine Model No.	
Engine Serial No.	
Date Purchased	

Paste Label From Literature Packet Here		
Literature Packet Here	Paste Label From	
	Literature Packet Here	

EXMARK PARTS PLUS® PROGRAM


EFFECTIVE DATE: September 1,1995

Program

If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE* Guaranteed!!

How the Program Works

- If dealer does not have part in stock for a "down" unit at the time of request by customer, the dealer contacts his distributor by 1:00 p.m., local time, and requests Exmark Parts Plus® shipment of six (6) line items or less.
- Distributor ships part(s) to dealer or customer, as requested by dealer, same day, overnight UPS Distributor bills dealer for part and freight charges where applicable.

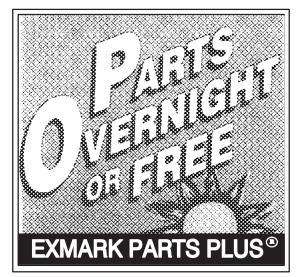

- 3. If distributor does not have the part(s) in stock to satisfy Exmark Parts Plus® order, he contacts Exmark by 3:00 p.m., central time, with an Exmark Parts Plus® order of six (6) line items or less.
- 4. If order is received by 3:00 p.m. central time, Exmark ships part(s) direct to dealer or customer, as requested by distributor, same day, overnight UPS, Exmark bills the distributor for parts and shipping charges, where applicable.
- 5. The customer pays for the <u>Part</u> and <u>freight</u> if it is shipped under the Exmark Parts Plus[®] and if it arrive in accordance to the program.
- 6. Who pays for the <u>part</u> and <u>freight</u> if it fails to arrive overnight in accordance to the program?
 - A. Under any circumstance the customer does not pay.
 - B. If the part does not arrive overnight due to:
 - 1. The dealer not submitting the Exmark Parts Plus® order to his Exmark distributor by 1:00 p.m., the dealer pays for the part and freight
 - 2. The Distributor being unable to ship the part the same day or not submitting the Exmark Parts Plus $^{\circ}$ order to Exmark by 3:00 p.m., central time, the Distributor pays for the part and freight.
 - 3. Exmark being unable to ship the part and the Exmark parts order is received by 3:00 p.m., central time, Exmark pays for the part and freight.
 - 4. If the part does not arrive overnight due to the shipper (UPS), the shipper pays for the freight and Exmark pays for the part.

The following restrictions apply — The Exmark Parts Plus® Program is available only through participating Exmark Dealers and applies only to orders submitted on this program Monday through Thursday. Parts Plus service is available only in the 48 contiguous United States. UPS has initiated a Saturday delivery program to many areas of the continental United States and can be requested for an overnight shipment on Friday to be delivered Saturday. The next day air charge, plus the Saturday delivery fee will be the responsibility of the purchaser. Exmark Mfg. will assume no responsibility for Saturday delivery shipments. To qualify, all Exmark Parts Plus® orders must be received by Exmark by 3:00 p.m., central time. Orders must be six (6) line items or less. Exclusions from the Exmark Parts Plus® Program are: Any wholegood or accessory in its entirety, engines and engine replacement parts, 5–speed Peerless transmissions and 5–speed transaxles, hydraulic or hydrostatic wheel motors, cutter decks and engine decks or any item exceeding United Parcel Service size and weight restrictions.

Due to UPS restrictions, aerosol spray paint is considered a hazardous material and cannot be shipped via UPS next day or Second Day Air.

Exmark Manufacturing stocks a limited supply of parts for transaxles, pumps and wheel motors. These parts can be ordered for Next Day Air shipment but will not be guaranteed per the Parts Plus Program.



READ OPERATOR'S MANUAL BEFORE OPERATING OR SERVICING EXMARK EQUIPMENT.

TABLE OF CONTENTS


Description	Page
Housing Assembly	4
Wheel and Tire Assembly No. 100–2870	
Gear Case Assembly No. 74–1861	
Engine and BBC Assembly	
Handle Assembly	
Panel and Control Assembly	
Rear Axle Assembly	10
Wheel and Tire Assembly No. 100–2860	11
Grass Bag Assembly No. 100–2886	12

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y. X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

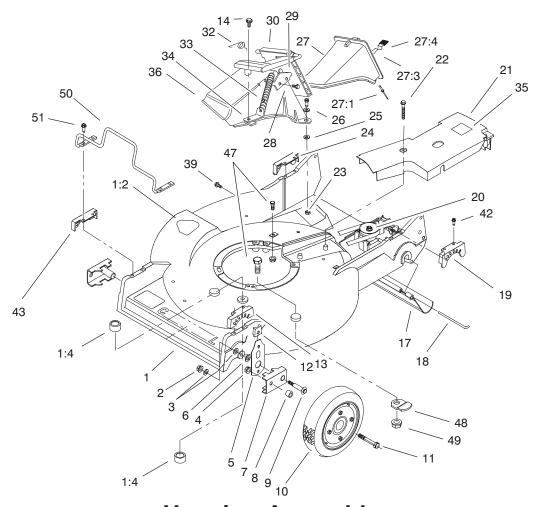


Sheet No.:2 C-2932

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	100–3288	1	Housing ASM
1:2	43-8480	1	Decal-Danger
1:4	68–9780	2	Bearing
2		2	Nut-Lock, NI
3	40–1940	4	Washer
4	32152–2	2	Nut-Conelock
5	66–7560		Front Spring Arm ASM
6	257–3	2 2 2	Washer-Thrust
7	61-8300	2	Arm-Pivot, Front
8	52-2480	2	Spacer-Wheel
9	27–6232	2 2	Bolt-Wheel
10	100–2870	2 2	Wheel & Tire ASM
11	323–12	2	Screw-HH
12	25-7740	2	Knob–Arm
13	49–8760	1	Quadrant-Front, LH
14	46–6811	1	Screw-HWH
17	44–0580	1	Shield-Trailing
18	33–3208	1	Rod-Shield
19	49–8740	1	Quadrant-Rear, LH
20	74–1861	1	Gear Case ASM
	99–6298	1	Cover–Belt
22	37–7260	2	Screw-HH
23	3296–42	2	Nut-Lock, NI
24	49–8750	1	Quadrant-Rear, RH
25	3256–22	2	Washer–Flat
26	321–7	2	Screw-HH


	•		
Ref. No.	Part No.	Qty.	Description
42	3295–35 76–4640 76–4650 46–8090 93–3154 93–7351 80–3770 76–4660 71–9350 52–2620 82–9152 46–6810 49–2040 49–8770 323–6 84–8930 3296–39	1 1 1 1 1 1 1 1 1 1 1 1 1 3 2 3 1 4	Discharge Plug ASM Rivet—Head, Flat Latch—Plug, Discharge Grip—Latch Screw—Plastite Latch—Plate Discharge Door ASM Retainer—Door Spring—Door Bracket—Spring Label—Grease Tunnel—Discharge Screw & Washer ASM Screw—Tapping Quadrant—Front, RH Screw—HH Shield—Retainer Nut—Lock, NI Guard—Engine Screw—HH

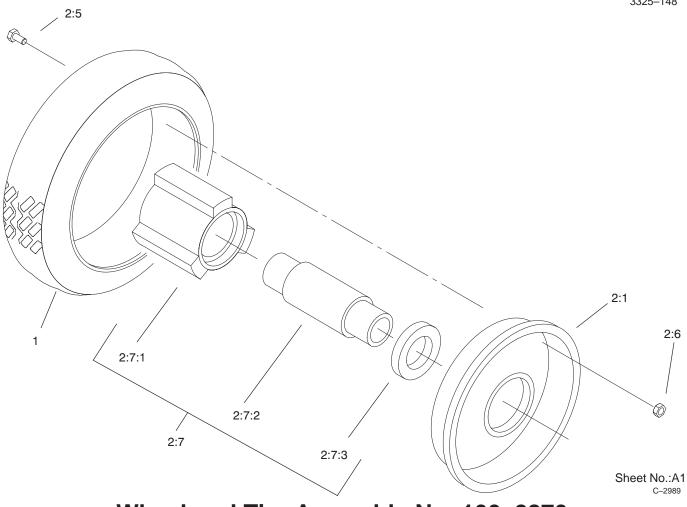

Wheel and Tire Assembly No. 100-2870

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No
1	3296–42 52–2410 52–2440	1 1 2 4 4 1 1 1 2	Tire Wheel ASM Plate-Wheel, Half Screw-HH Nut-Lock, NI Hub & Bearing ASM Hub-Bearing Spacer-Bearing Bearing-Wheel		


Ref. No.	Part No.	Qty.	Description

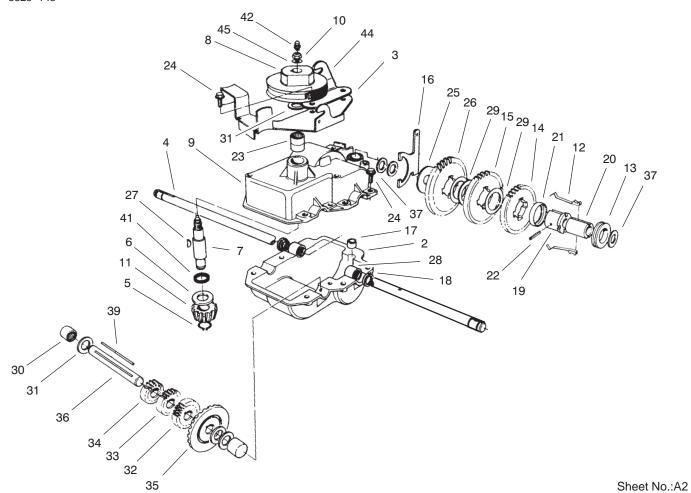

Gearcase Assembly No. 74–1861

Ref. No.	Part No.	Qty.	Description
2	74–1920	1	Case-Gear, Lower
3	49-8461-03	1	Bracket-Guide, Belt
4	74–1890	1	Shaft-Output
5	32151–57	1	Ring-Retaining
6		1	Washer-Thrust
7	68–8190	1	Shaft–Input
8	39–6740	1	Pulley
9	74–1880	1	Case–Gear, Upper
10	3296–5	1	Nut-Lock NI
11	39–6660	1	Pinion-Bevel
12	29–9330	2	Key
13	29–9340	1	Collar-Shift
14	42–4740	1	Gear-38 Tooth
15	29–9271	1	Gear-42 Tooth
16		1	Yoke-Shift
17	29–9570	1	Bushing-Yoke
18	47–6730	2	Seal–Oil
19	55–8010	1	Sleeve-Gear
20	39–6720	1	Sleeve
21		1	Retainer–Key
22		1	Pin-Groove
23	47–7270	2	
24		6	
25	29–9690	1	Washer
26		1	Gear
27	3257–1	2	Key–Woodruff

Ref. No.	Part No.	Qty.	Description
28 29 30 31 32 33 34 35 36 37	48–2060 36–4770 252–103 36–4792 39–6650 46–3550 46–3540 74–1760 53–7950 36–4780 39–7842 47–7260	2 3 2 4 1 1 1 3 1 1 1 1 1 1 1	Bearing–Roller Washer Bearing–Closed Washer–Thrust Gear–18t Gear–14t Gear–12t Gear–Bevel Shaft–Intermediate Washer Key Seal Zerk Brake–Engage, Traction Washer–Flat

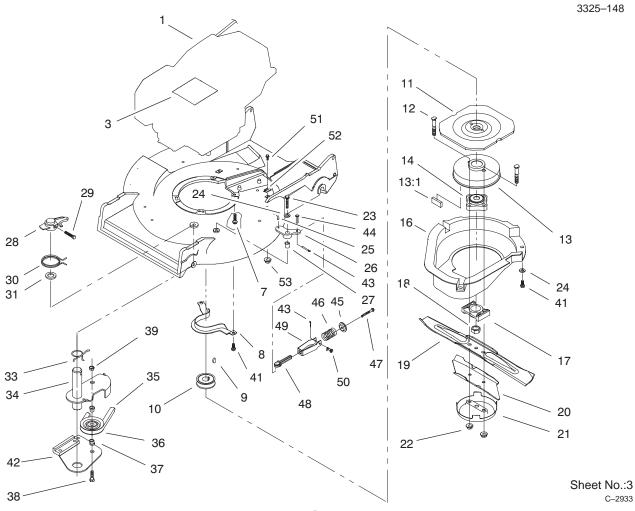


Engine and BBC Assembly

Ref. No.	Part No.	Qty.	Description
☆1		1	Engine–Kawasaki, FC150V–FS26
3	1–213387	1	Decal-Recoil
7	100–2835	3	Screw-Mount, Engine
8	66-0570-03	1	Bracket-Guide, Belt
9	3257–17	1	Key-Woodruff
10	56–6180	1	Driver–Pulley
11	56-6160-03	1	Flywheel – Bbc
12	42-3190	2	Bolt-Blade
13	94–9431	1	Brake Drum ASM
13:1	52-3480	2	Dampner–Vibration
14	42-6890	1	Hub ASM
16	46-5693	1	Shield
17	62-4280	1	Spacer–Blade
18	603164	1	Nut-Blade
19	42–1000–03	1	Blade – 21"
20		1	Stiffener-Blade
21		1	Cup-Anti-Scalp
22	54–9190	2	Nut-Lock
23	32104–107	1	Screw-HH
24		2	Washer–Flat
25	49–2810	1	Link – Control
26		1	Bellcrank
27		1	Sleeve-Bellcrank
28	49–2820	1	Lever
29	32104–96	1	Screw-HH

Ref. No.	Part No.	Qty.	Description
30	49–7970	1	Spring-Torsion
31	70–1160	1	Washer
33	85–6880	1	Spring-Torsion
34	84–9130	1	Plate-Brake
35	100–6486	1	V–Belt
36	46–5650	1	Pulley-Idler
37	46–5631	2	Hub-Pulley, Idler
38	322–6	1	Screw-HH
39	3296–47	1	Nut-Lock, NI
41	32144–70	3	Screw-HH
42	84–9180	1	Brake Plate ASM
43	3272–1	2	Pin-Cotter
44	84–9050	1	Pin-Spring
45	65–5280	1	Retainer-Spring
46	84–9100	1	Spring
47		1	Screw-HWHTF
48	84–8870	1	Guide-Spring
49		1	Bracket-Spring
50	84–9040	1	Pin-Cable
51	322–6	1	Screw-HH
52	62-3720	1	Clamp-Cable
53	3296–58	1	Nut-Lock NI
	l		

[☆] Not serviced

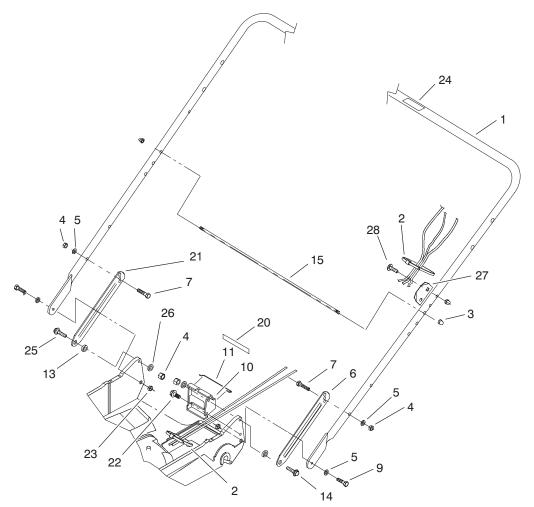


Sheet No.:4

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2385-03	1	Handle
2	3290–378	2	Tie-Cable
3	32111–7	3	Nut–Cap
4	3296–29	4	Nut–Lock
5	3290-456	4	Washer-Belleville
6	103-0143	1	Latch-Handle, LH
7	322–7	2	
9	322–6	2	Screw-HH
10	74–1741	1	Bracket–Adjustment, Traction
11	46-7030	1	Retainer-Cable
13	3–3287	2	Spacer-Latch, Handle
14	27–7210	1	Screw-Shoulder
15	48-2810	1	Rod-Support, Bag
20	74–1970	1	Decal-Position, Gear
21	103–0142	1	Latch-Handle, RH
22	32144–70	1	Screw-HH
23	3296–47	2	Nut-Lock, NI
24	104–1329	1	Decal-Protection, Hearing
25	27–7211	1	Screw-Shoulder
	3256–23	2	Washer-Flat
27	104–1326	1	Plate-Aligning, Bag
28	3229–3	1	Screw-CARR


	Ref. No.	Part No.	Qty.	Description
Į				

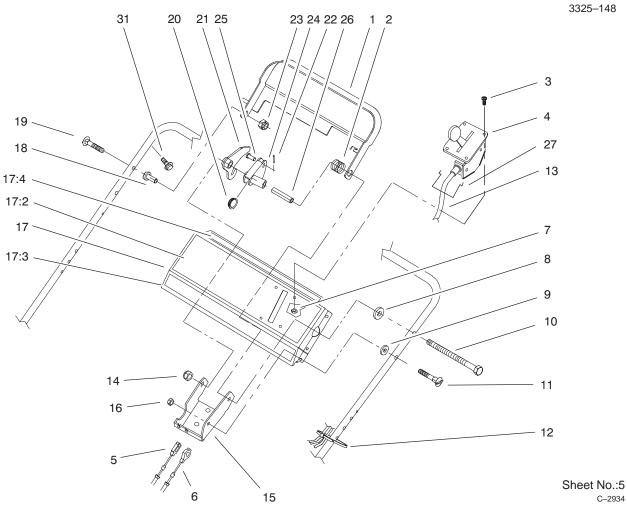

Panel and Control Assembly

Ref. No.	Part No.	Qty.	Description
1	84-8940-03	1	Bar-Control
2		1	Spring-Control
3	3250-12	4	Screw-PPH
4	85–6770	1	Control-Throttle
5	84–9120	1	Cable-Traction
6	84–9110	1	Cable-Clutch
7	3296–2	4	Nut-Lock
8	71–9310	1	Spacer
9	71–9320	1	Spacer
10	322-19	1	Screw-HH
11	46-6430	1	Screw-Handle
12	3290–378	1	Tie–Cable
13	100–2839	1	Cable-Throttle
14	3296–29	1	Nut-Lock
15	92–1778–03	1	Bracket-Control
16	3296–42	1	Nut-Lock, NI
17	100–6481	1	Panel-Control
17:2	100–3282	1	Decal-Panel, Control
17:3	1–213400	1	Decal-Console
17:4	104–8582	1	Decal-Panel, Danger
18	49–1631	1	Spacer–Support
19	17–9427	1	Screw
20		1	Bushing-Flange
21		1	Lever-Traction
22	3272–1	1	Pin-Cotter
23	3296–58	1	Nut-Lock NI

Ref	. No.	Part No.	Qty.	Description
	24 25 26	84–8990 84–9040 84–9030	1 1 1	Lever–Bbc Pin–Cable Spacer–Bracket, Control
	27	85–6780	1	Retainer–Cable, Throttle
	31	32104–76	6	Screw

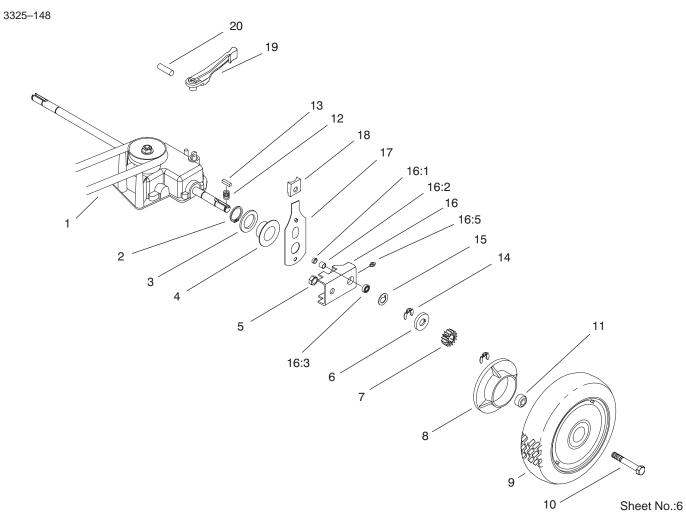


Rear	Axle	Assembly
------	-------------	-----------------

Ref. No.	Part No.	Qty.	Description
1	1–213237	1	V–Belt
2	32151–36	2	Ring-Retaining
3	74–1810	2	Washer
4	48–2170	2	Cap–End
5	32152-2	2 2	Nut–Conelock
6	62-3830	2	Washer-Thrust, Outer
7	39–9160	2	Gear-Pinion
8	74–1640	2	Cover-Wheel
9	100–2860	2	Wheel & Tire ASM
10	323–13	2	Screw-HH
11	74–1650	2 2	Spacer-Cover, Wheel
12	39–9650	2 2	Spring-Compression
13	612066	2	Key .
	32151–68	4	
15	49–7700	2	Washer-Thrust, Outer
16	74–1851	2	Pivot Arm ASM
16:1	47–6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92–6316	1	Zerk-Drive, Special
17	66-7561	2	Rear Spring Arm ASM
18	25-7740	2	Knob-Árm
19	74–1960	1	Lever-Shift
20	32121–99	1	Pin-Coil
*99	100–2512	1	Tube-Drain, Oil


Ref. No.	Part No.	Qty.	Description

^{*} Not illustrated

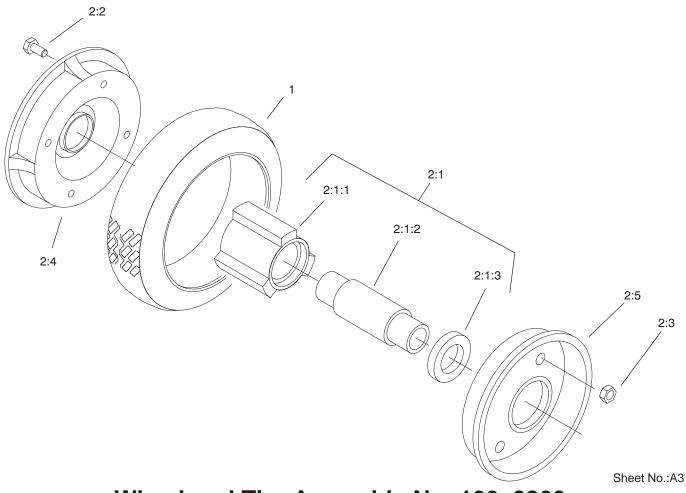

Wheel and Tire Assembly No. 100–2860

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1 ★2 ★2:11 2:1:2 2:1:3 2:2 2:3 2:4 2:5	52-2410 52-2440 52-2450 321-2 3296-42 53-7780-06	1 1 1 1 1 2 4 4 1 1	Tire Wheel ASM Hub & Bearing ASM Hub-Bearing Spacer-Bearing Bearing-Wheel Screw-HH Nut-Lock, NI Plate-Wheel, Half Wheel Half/Gear ASM				

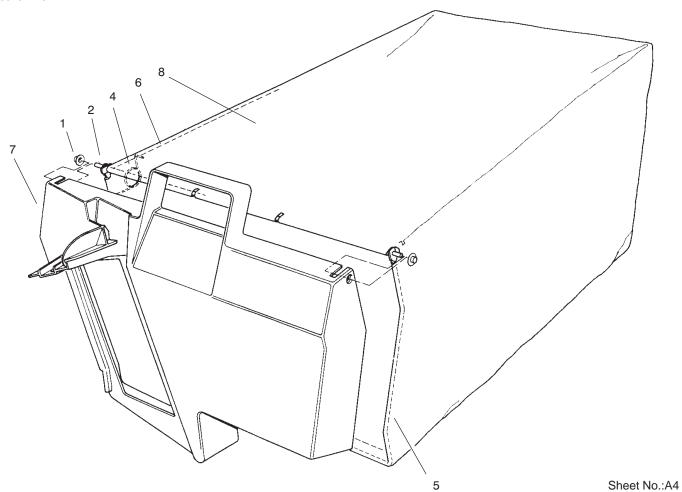

Grass Bag Assembly No. 100–2886

Ref. No. Part No.	Qty.	Description
Ref. No. Part No. 1 3290–422 2 33–4820 4 36–6910 5 42–4020 6 42–4030 7 48–2840 8 98–8017	Qty. 2 1 2 1 1 1 1	Nut-Push Hinge-Door, Bag Spring Frame-Bag Frame-Bag, Upper Door-Bag, Grass Bag-Grass

Ref. No.	Part No.	Qty.	Description

SERVICE RECORD

Date	Description Work Done	Service Done By

SERVICE RECORD

Date	Description Work Done	Service Done By
	I .	

SERVICE RECORD

Date	Description Work Done	Service Done By

SEE EXMARK'S COMPLETE LINE OF PRODUCTS FOR TURF CARE

LAZER Z®

LAZER Z® HP

TURF RANGER®

TURF TRACER®

TURF TRACER® HP

VIKING HYDRO

METRO®

METRO® HP

SELF STEERING SULKY

GRASS CATCHER

MICRO MULCH[™] ACCESSORY

© 2001 EXMARK MFG. CO. INC INDUSTRIAL PARK BOX 808 BEATRICE NE. 68310

ALL RIGHTS RESERVED

FORM NO. 3325-148 (402) 223-6300 FAX (402)223-6384

PRINTED IN U.S. A

